

# Electronic Protection Safestop<sup>®</sup> Vehicle Anti-theft System



## Safestop® Vehicle Anti-theft Systems

### Features of Pro-gard's Safestop Anti-theft System

- Always On Tamper Proof Design**
  - Once turned on, systems anti-theft functions allow the vehicle to remain running while removing the ignition key. With ignition key removed, the shifter is locked and anti-theft functions cannot be overridden by turning off the toggle switch.
  - Once activated, the anti-theft functions can only be deactivated if the key is in the ignition.
- Automatic Function**
  - With system on, anti-theft functions are activated via the removal of the ignition key - no additional steps or processes to remember.
  - The vehicle maintains functionality of all electrical accessories including: heat, A/C, radio, TV/ video surveillance equipment, computer, lights, life saving devices, etc.
- Hands Free Activation** - Can be wired to automatically activate when the light bar or siren is turned on.
- Plug-and-Play Installation** - Plug-and-play connectors for Ford and GM, only anti-theft device that is plug-and-play compatible to GM vehicles.
- Gun Lock Secure** - Eliminates access to weapon racks with an electronic gun lock once anti-theft functions are activated. Weapon will remain locked even if the momentary switch is pushed.
- Trunk Lock Secure** - Eliminates access to trunk via the factory trunk latch once anti-theft functions are activated.
- Brake Pedal-Engine Override** - Can be wired to instantly kill the engine via the brake pedal when anti-theft system is activated.



Anti-theft Module



Toggle Switch  
*included with each module*

**Turn it on. Leave it on.**

**Gun Lock Secure**  
Prevents access to electronic weapon mount even when momentary switch is pressed

**Trunk Lock Secure**  
Prevents access to trunk even when factory trunk latch release is pressed

**Brake Pedal Override**  
Kills engine with compression of brake pedal

Plug and Play Connections for Ford and GM vehicles provide quick and easy installation every time.

Turn it on and leave it on. As long as the ignition key is removed, the anti-theft protection is activated.

Distributed By:

**STRONG | RELIABLE | SECURE**

PARTITIONS • PRISONER TRANSPORT SYSTEMS • GUN RACKS  
 ABS SEATS & FLOOR PANS • PUSH BUMPERS • BALLISTIC DOOR PANELS  
 SEAT & TRUNK ORGANIZERS • WINDOW ARMOR • AIRBAG ON/OFF SWITCHES  
 VEHICLE ANTI-THEFT SYSTEMS • CARGO CABINETS • SKID PLATES  
 BALLISTIC TICKET BOARDS • ABS DOOR PANELS

PGPL SFS 11.10